



09:41

100 %



mycomfort



Basement

1st Floor

2nd Floor

16,0°

19,0°

**Controlling your
heating system
has never been
easier**



Eco



Reduced
Temperature
Mode



Comfort



09:41

100 %



mycomfort



Basement

1st Floor

2nd Floor



User-friendly interface



Eco



Reduced Temperature Mode



Comfort



Set Duration



**Intuitive touch and
swipe gestures**

03:30



Choose Central Display

Buffer Charge Status



**Personalised
adjustable
display**



09:41

100 %



mycomfort




Basement

1st Floor

2nd Floor

Quick start buttons
for Eco, Comfort and
operation modes

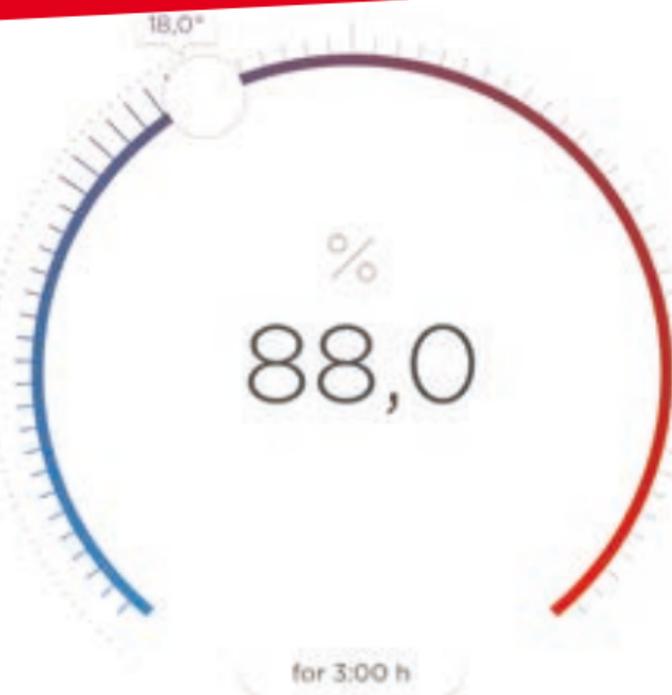

Eco



Resume
Reduced
Temperature



Comfort



Choose Heating Program

Hot Water

Set the desired operation mode quickly and easily



09:41 100 %



mycomfort



Basement

1st Floor

2nd Floor

Under

Mobile: change settings
from your home or on-
the-go



Cancel Single
Charge



Hot Water



09:41



Comfort



Set Temperatures

1st Floor

2nd Floor

7° Salzburg

19,0°

Room Temperature
Basement

22,0°

Room Temperature
1st Floor

21,0°

Room Temperature
2nd Floor

18,0°

Room Temperature
Underfloor heating

66,0°


Hot Water
1st Floor

0°

**Room and DHW
temperatures at
a glance**

Reduced
temperature
mode

Comfort

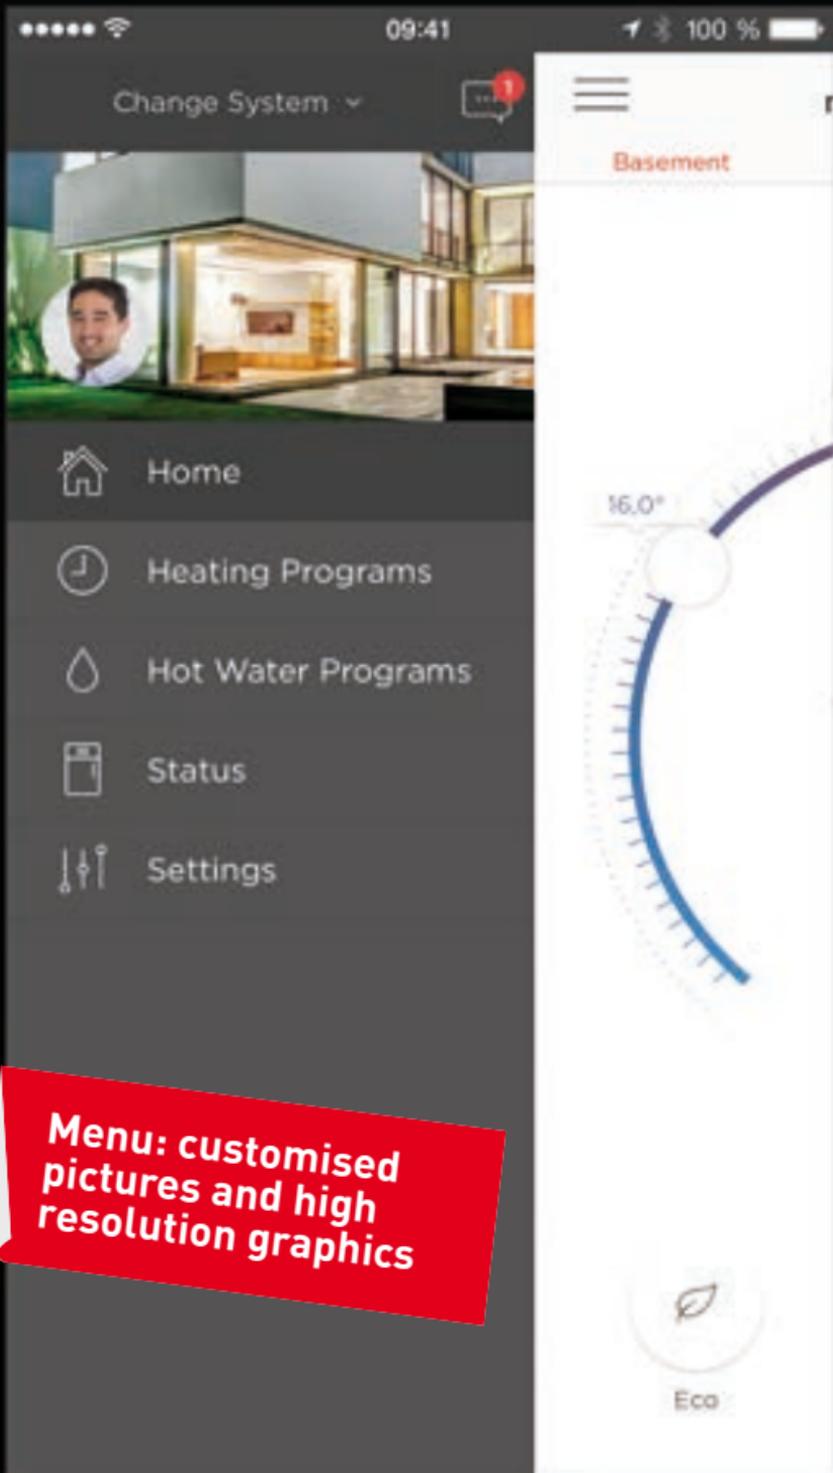

Menu: customised pictures and high resolution graphics



09:41



Heating Programs Program 1



Mo

Tu

We

Th

Fr

Sa

Su

06:30

20,0°

08:00

18,0°

16:00

21,0°

22:30

19,0°

Mo

Tu

We

Th

Fr

Sa

Su

Set heating programs conveniently and easily transfer to other dates

12:00


20,0°

20:00

22,0°

22:30

19,0°

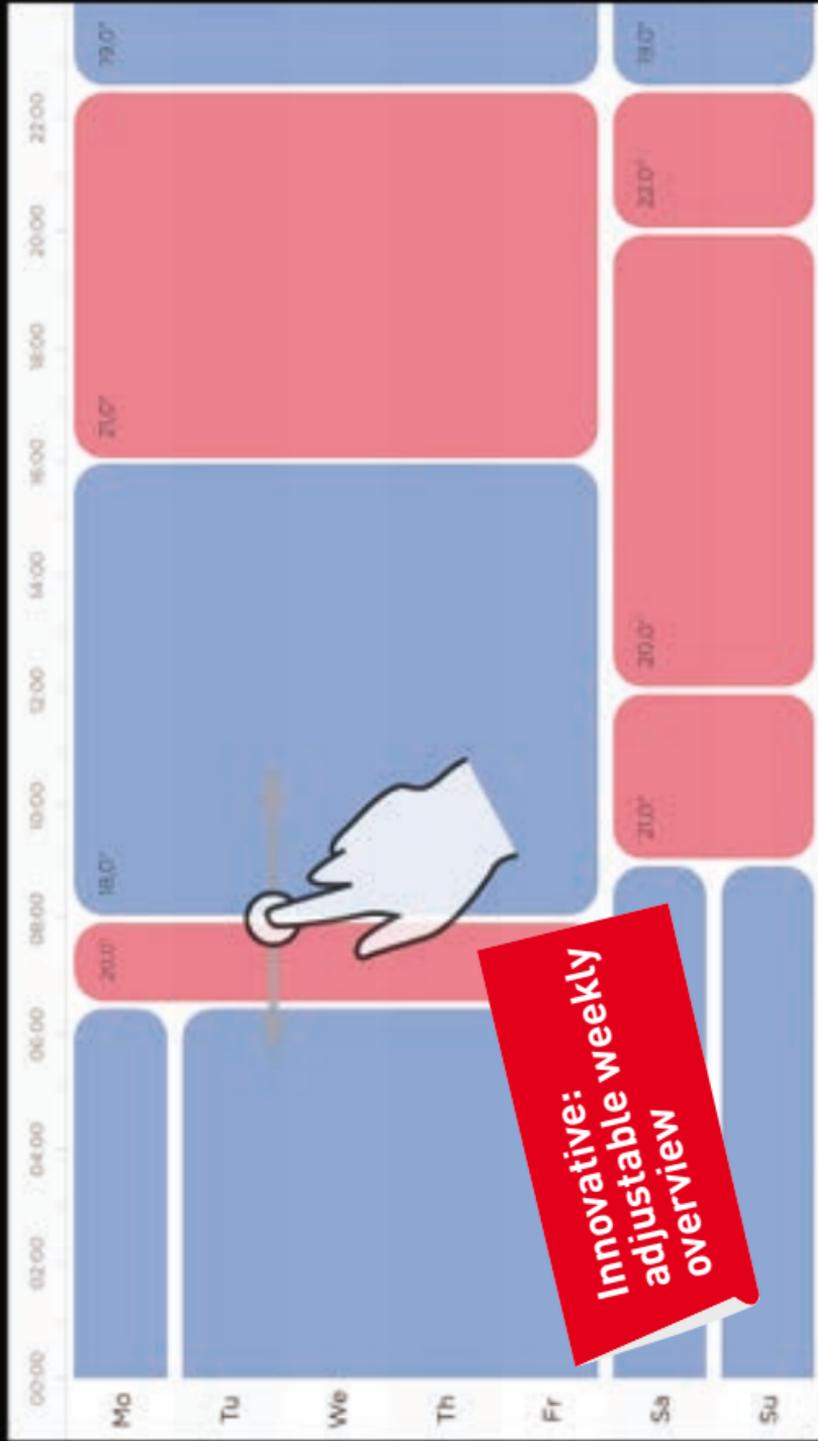

**Innovative:
adjustable weekly
overview**



09:41

100 %



Status

BioWIN2

FireWIN

Boiler

BioWIN2



Mode

Heating Operation

Boiler Temperature Setpoint

70,...

Current Boiler Temperature

68,...

Runtime until Cleaning

2.250 hours

Runtime until Main Cleaning

4.500 hours

Runtime until Maintenance

9.000 hou...

**Current boiler
status**



09:41

100 %



Settings

Logout

Home



Edit System

Temperatures

 Eco Mode 18,0° / 3:00 h

 Comfort Mode 22,0° / 3:00 h

 Heating Operation

 Reduced Temperat

 Hot Water Single Charge

Push Notifications


 Info Messages

**User-specific
settings
and pictures**

Change System ^



Home

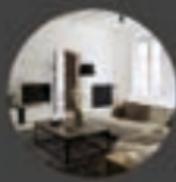

Apartment

 
Basement

16,0°


Eco

A vertical panel on the right side of the screen. At the top, it says "Basement" in red. Below that is a large, curved temperature control slider. The slider has a blue bar and a white circle indicating the current temperature, which is set to 16,0°. The slider is surrounded by a dashed line. At the bottom of the panel, there is a circular icon with a leaf symbol and the word "Eco" below it.

Multiple properties in one App



09:41

 

Change System ▾



Basement



Welcome to myComfort

With this app you'll be able to manage and maintain your Windhager heating solutions at the palm of your hand.

53 minutes ago

16,0°



Eco

**Status, information
and alarms via push-
notifications**



0215 036393/00